HONDA MARINE

Quick Reference Guide

Before Operating
After Using

Honda
BF60A BFP60A

⁎ Read and understand the Owner's Manual before operating the Outboard motor.

Before Operating

1 Engine Oil

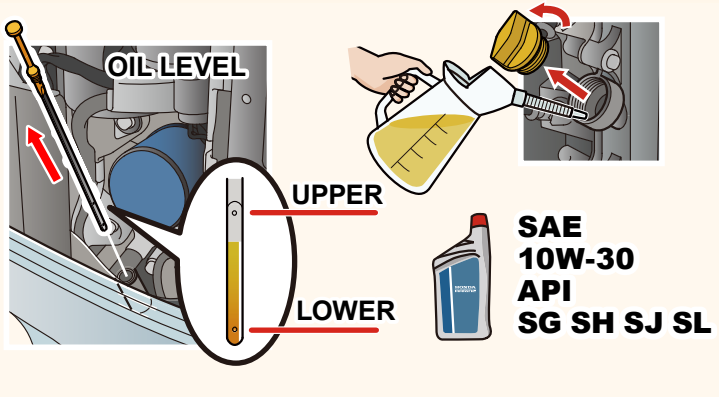

SAE
10W-30
API
SG SH SJ SL

2 Fuel Filter

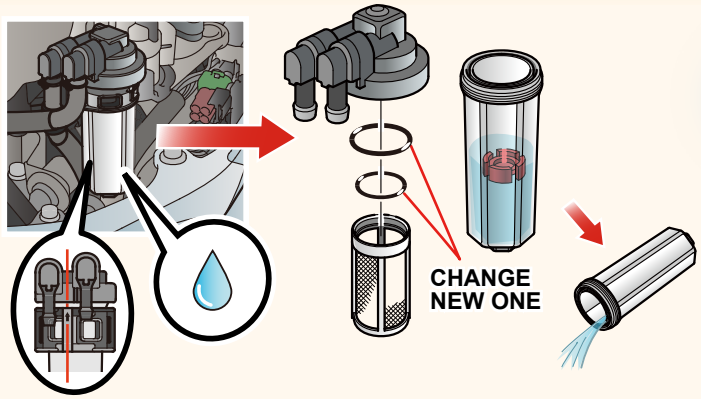

3 Anode Metal

4 Propeller & Cotter Pin

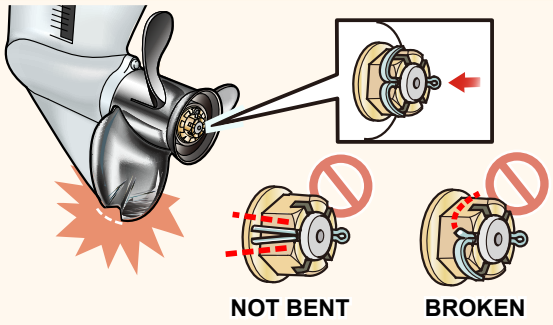

5 Battery

12V-52Ah/5HR (CCA420)
or more capacity

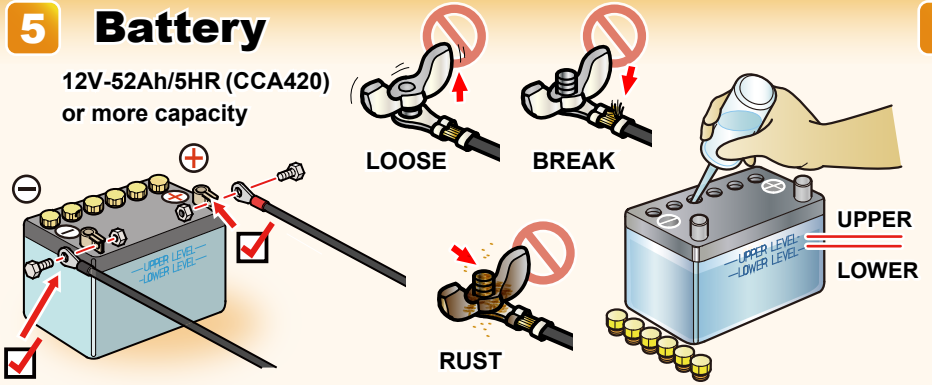

6 Fuel Line

-Amount of fuel
-Fuel condition
-Hose connection
-Hose bending
-Leakage

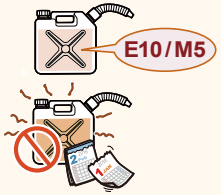

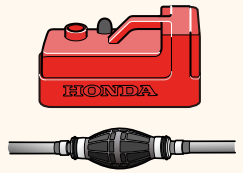

Research Octane Number
91 or higher

7 Condition

-Startability
-Sound, vibration
-Water circulation

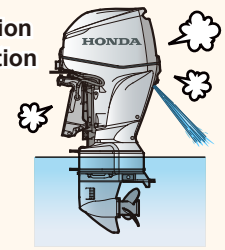

8 Emergency Stop Switch

Check that the emergency stop switch stops the engine.

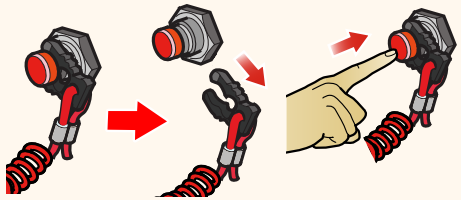

After Using

For a long time to use.

① Cool down the engine by idling for a few minutes.
② **Flush the engine for at least 10 minutes.**
③ Drain the flushing water completely without tilt-up.

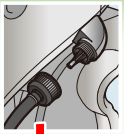

USE WATER HOSE JOINT
(ENGINE STOP)

OPTIONAL PARTS
Joint, Water Mouth
(19271-881-811)

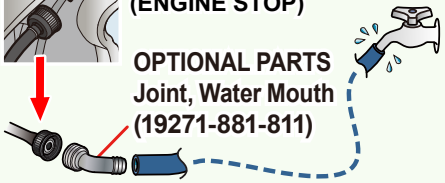

USE HEADPHONE TYPE WASHER
(ENGINE RUN)

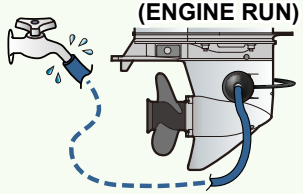

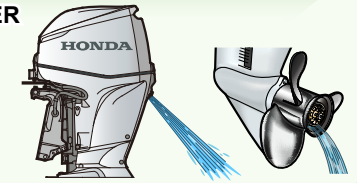

© 2022 Honda Motor Co., Ltd.
S2ZZ3612

HONDA MARINE

Quick Reference Guide

Regular Maintenance
By User

Honda
BF60A BFP60A

1 Engine Oil

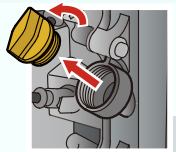

SAE 10W-30
API SG SH SJ

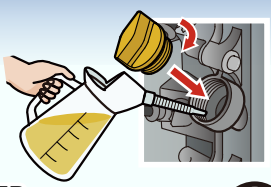

WITH FILTER REPLACEMENT
2.7 ℓ

W/O FILTER REPLACEMENT
2.6 ℓ

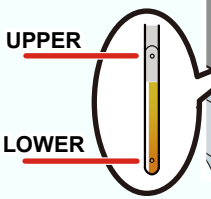

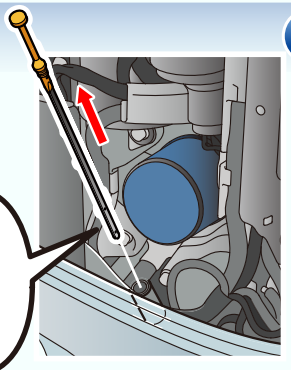

2 Spark Plug

0.8–0.9 mm

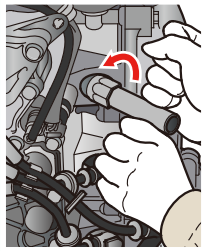

LMAR6C-9
(NGK)



3 Fuel Filter (Lo)

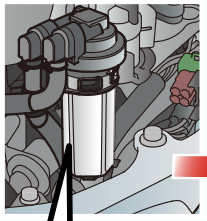

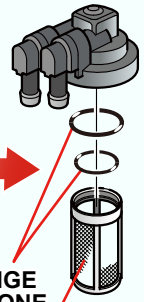

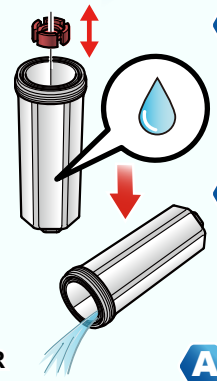

CHANGE NEW ONE

CLEAN FUEL FILTER

4 Propeller & Cotter Pin

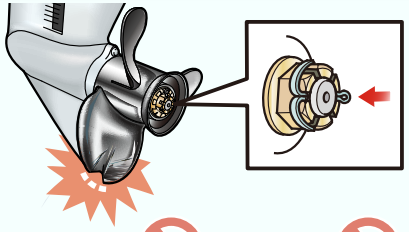

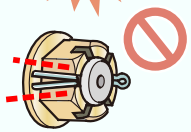

NOT BENT

BROKEN

5 Grease

Water-resistant urea-based grease

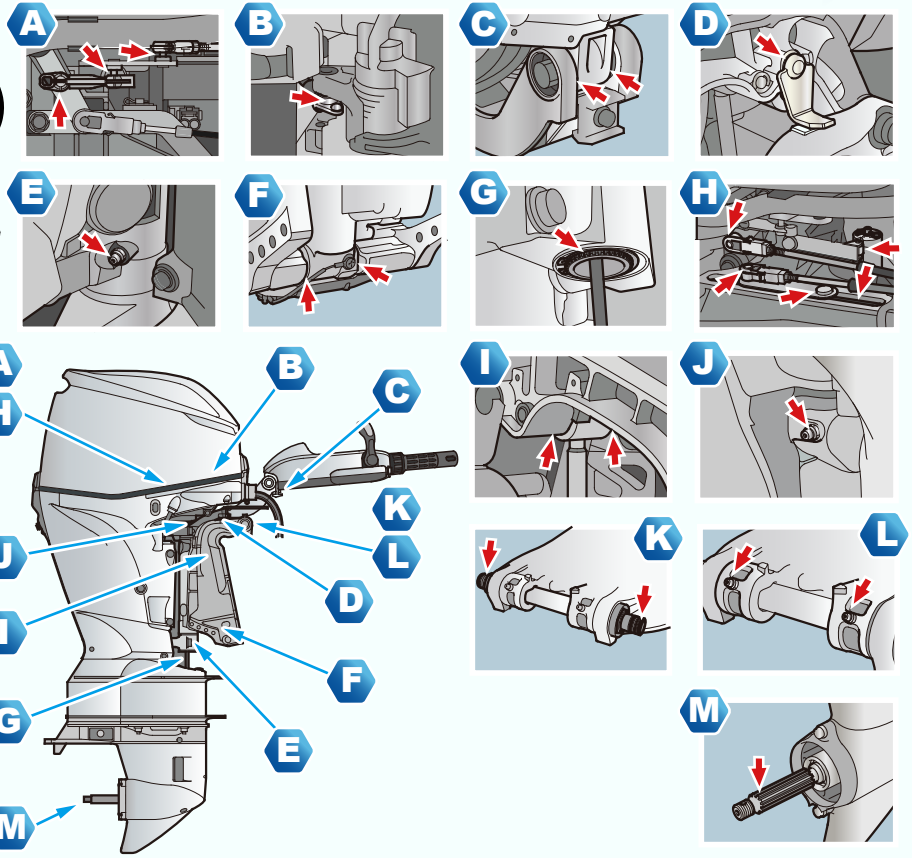

Maintenance Schedule

: Check : Change : Clean : Check-adjust

Befor Operation	Regular Service	Regular Service Period	Before each use	First month or 20 Hours	Every 6 months or 100 Hours	Every year or 200 Hours	Every 2 year or 400 Hours
1	1	Engine oil	✓	✓	✓		
	2	Spark plug			✓	✓	
2	3	Fuel filter (Lo)	✓		✓		✓
3		Anode (Outer)	✓				
8		Emergency stop switch	✓				
4	4	Propeller Cotter pin	✓				
5		Battery	✓				
	5	Grease		✓	✓		
6		Fuel line	✓				

Inspection Items By The Dealer

Fuel line	Every 2 years Replace if necessary				✓
Valve clearance				✓	
Idle speed Throttle linkage		✓	✓		
Engine oil filter	Take the outboard motor to Honda servicing dealer.			✓	
Breather tube Timing Belt Thermostat Water pump				✓	
Bolts and nuts		✓	✓		
Gear case oil		✓	✓		
Fuel filter (Hi)			✓		✓
Power Trim/Tilt			✓		
Shift cable			✓		
Anode (Inner)					✓

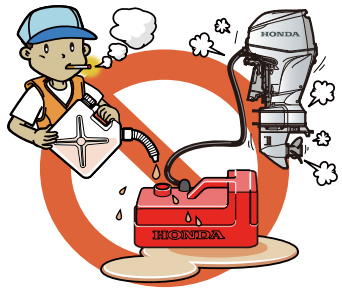

© 2022 Honda Motor Co., Ltd.
S2ZZ3622